



THE UNIFLOW RELEASE STATION

User-friendly touch screen for secure print release

The uniFLOW Release Station is equipped with a touch screen and the option to connect a MiCard card reader externally. It enables users to identify themselves on virtually any device and securely release their print jobs. The uniFLOW Release Station offers a similar user experience as an embedded applet on a Canon or other multi-vendor device. In combination with a copy control cable, it not only allows for device locking but also for tracking copy costs.

- User-friendly touch screen
- MiCard card reader can be connected externally via USB
- Secure print release across platforms
- Clear user interface for easy login/logout and secure printing
- Intuitive wizard-driven installation
- User identification via connected card reader or PIN code
- Different mounting options





Immediate benefits

Multi-vendor 'My Print Anywhere'

The uniFLOW Release Station can be connected to virtually any device. Combined with uniFLOW Online or uniFLOW it provides users with a single platform for their secure and mobile printing, and the flexibility of true 'My Print Anywhere' output, across different devices.

All-in-one

The uniFLOW Release Station is an integrated solution with a touch screen, embedded software, and the option to connect a MiCard card reader. The installation process is wizard-based and independent of the printer or multi-functional device.

Investment security

With device fleets likely to change over time, the uniFLOW Release Station guarantees investment security: It can be transferred from one printer to another, always providing a consistent user interface. When implementing devices for which an embedded applet is available, the uniFLOW Release Station can be exchanged for uniFLOW Online device subscriptions or uniFLOW device licenses.

Standard installation across platforms

The uniFLOW Release Station follows a standard installation process on all platforms. This reduces the time IT administrators spend setting up the uniFLOW Release Station for devices from different manufacturers. Alternative mounting options ensure a tailored solution for different device types.

Exploiting uniFLOW and uniFLOW Online functionality



Secure login and document release

To gain access to their secure print queue, users identify themselves at the device. Once logged in, they can manage their print jobs as desired. The clear user interface, including login/logout and the secure print queue, makes handling uncomplicated. Guest users who submit a print job using a mobile device will receive a job code via email. This code enables them to get access to a device and release their print.



Different identification methods

Depending on whether a MiCard card reader is connected, users gain access by presenting their proximity card or else by entering their PIN or job code via the uniFLOW Release Station touch screen.



Accounting with multi-level cost center selection

uniFLOW Online and uniFLOW provide print and copy accounting functionality, enabling administrators to track and assess costs. A multi-level cost center structure allows for pre-assigning chargeback costs to an appropriate cost center, project, or department. This functionality is available with a uniFLOW Release Station if combined with a copy control cable. Via the user interface, users can be prompted to select 'their' cost center from a hierarchy of cost centers, before they can continue printing a document.




My Print Anywhere

Print jobs follow the users from device to device, which they can then release using the connected uniFLOW Release Station. My Print Anywhere provides additional flexibility if a device is unavailable for some reason or if users need to print on a device other than the one they usually use.

Easy wizard-driven installation

A setup wizard for the uniFLOW Release Station guides administrators through the installation process, simplifying the configuration of output settings and device-specific behavior.

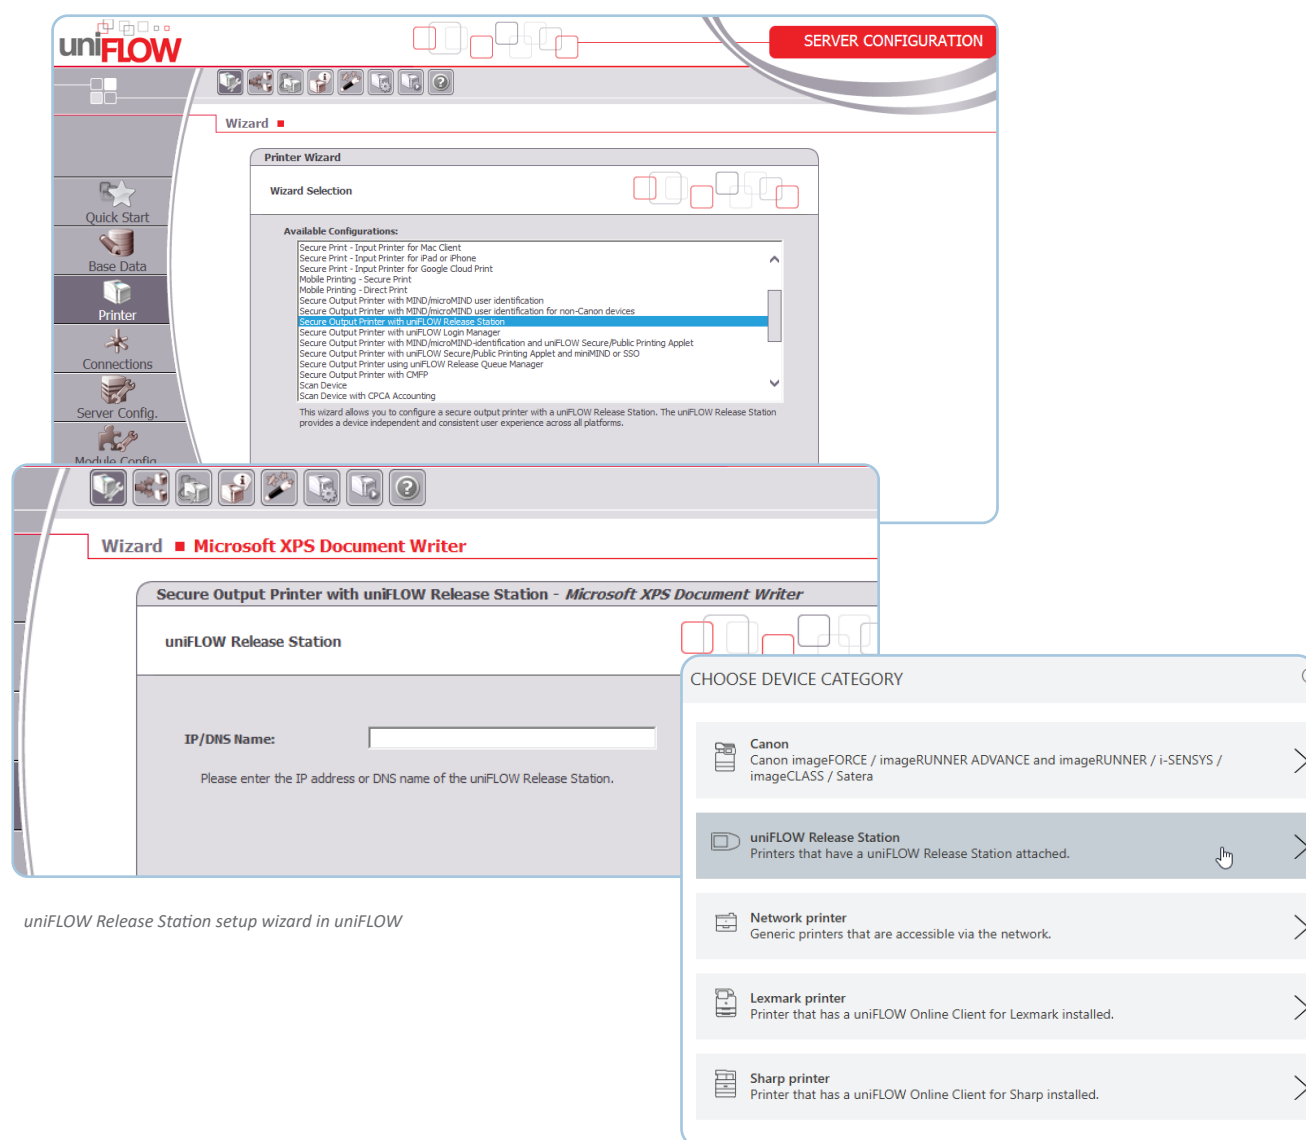

uniFLOW Release Station setup wizard in uniFLOW

uniFLOW Release Station setup wizard in uniFLOW Online

Mounting the uniFLOW Release Station

Depending on the device manufacturer and model, the uniFLOW Release Station can be attached directly to the machine using a bracket, mounted to the wall or set up on a stand pole next to the machine.



Device bracket

Mounting the uniFLOW Release Station with the aid of a device-specific bracket is accomplished by removing the respective screws from a device, positioning the bracket over the holes and attaching with the screws. The Universal Bracket is attached with double-sided adhesive tape and supports a wide range of devices.




Wall mount

An adjustable angle wall mount can be used to mount the uniFLOW Release Station to the wall next to any printer (regardless of make and model).

Stand pole

A stand pole is available for freestanding devices.
(Not available in the Americas)

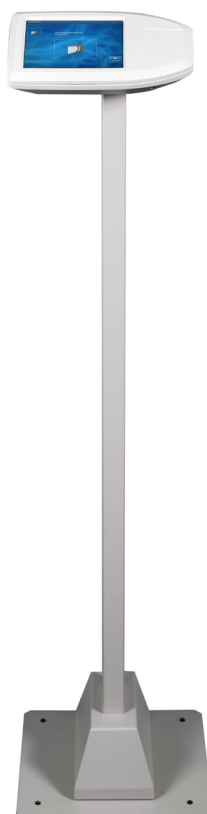



Specifications

- 5.7 inch capacitive multi-touch screen with hardened glass surface
- USB port to connect a MiCard card reader externally
- Embedded network switch for simplified network connection
- Integrated cover preventing cables being unplugged
- An I/O connector for controlling and monitoring copying devices; the copy control function requires a respective cable



www.uniflow.global
www.uniflowonline.com
www.syshub.global